Please Visit Our Website www.vergoindustrial.com/AS7A2 to View Assembly Videos, Manual or to Contact us.

VERGO INDUSTRIAL

3 - in -1 ALUMINUM HAND TRUCK


MODEL # AS7A2

ASSEMBLY INSTRUCTION


CONTENTS

REF.	QTY.	DESCRIPTION
1	1	NOSE
2	1	NOSE PLATE
3	2	SHIM
4	1	AXLE
5	2	AXLE BRACKET
6	1	FRAME ASSEMBLY
7	2	WHEEL
8	1	HANDLE BAR

REF.	QTY.
H1	4
H2	4
H3	2
H4	6
H5	2
H6	2
H7	2

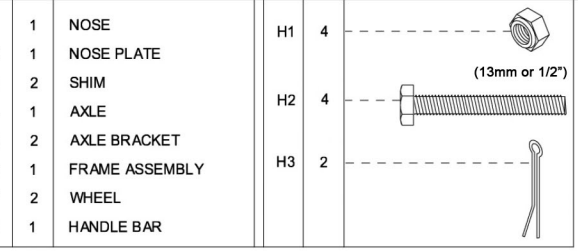

1

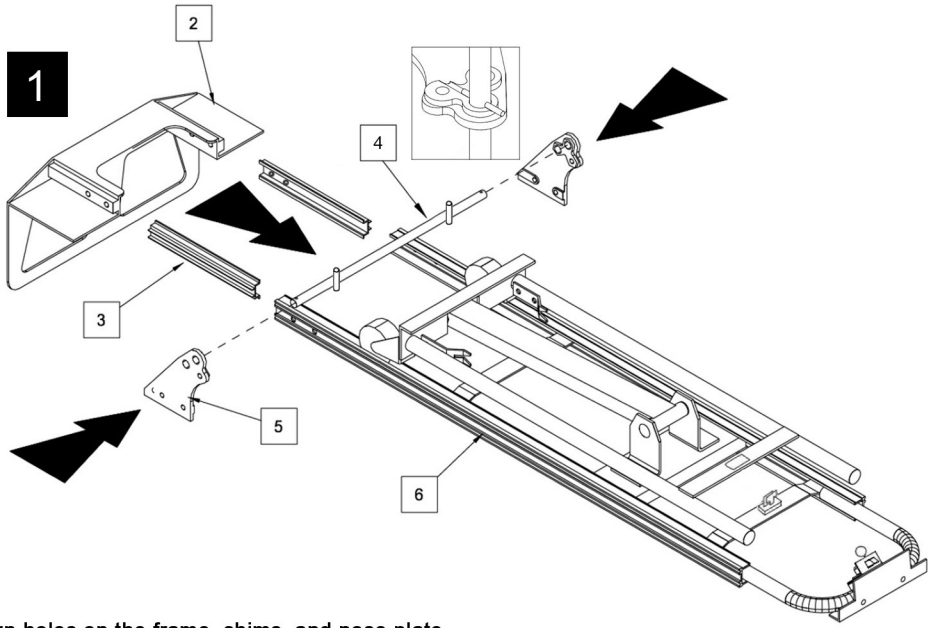


* Align holes on the frame, shims, and nose plate

* Insert axle into brackets and align with same holes


* Insert bolts (H2) to stabilize parts

2

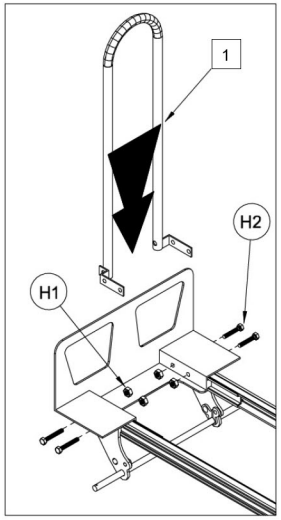


* Gently turn over, align nose with nose plate and fully tighten bolts

3

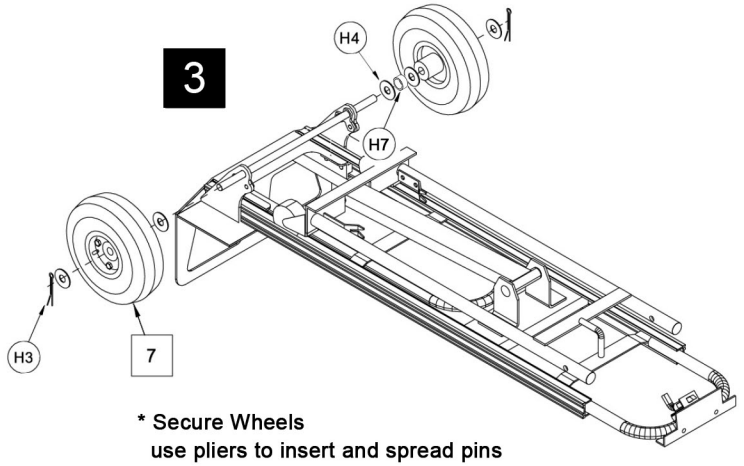

* Secure Wheels
use pliers to insert and spread pins

4

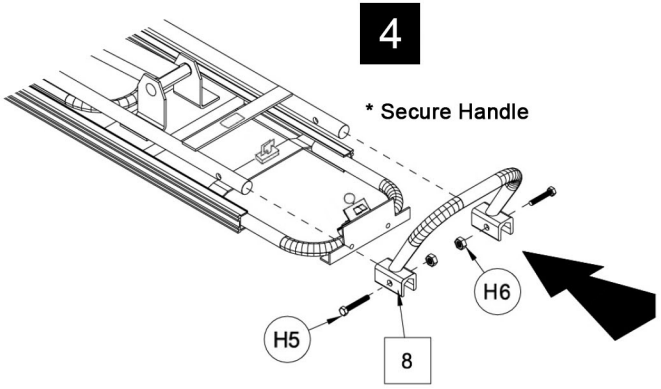

* Secure Handle