Visit Our Website www.vergoindustrial.com/AS7B to View Assembly Video, Manual or to Contact Us.

VERGO INDUSTRIAL

2 - in -1 ALUMINUM HAND TRUCK


MODEL # AS7B

ASSEMBLY INSTRUCTION

CONTENTS


REF.	QTY.	DESCRIPTION	REF.	QTY.	DESCRIPTION
1	1	NOSE PLATE	H1	4	
2	2	SHIM	H2	4	
3	1	FRAME ASSEMBLY	H3	2	
4	2	AXLE BRACKET	H4	6	
5	1	AXLE	H5	4	
6	2	WHEEL	H6	4	
7	1	HANDLE			

1 Line up the holes on the frame with the shims, nose plate and axle brackets

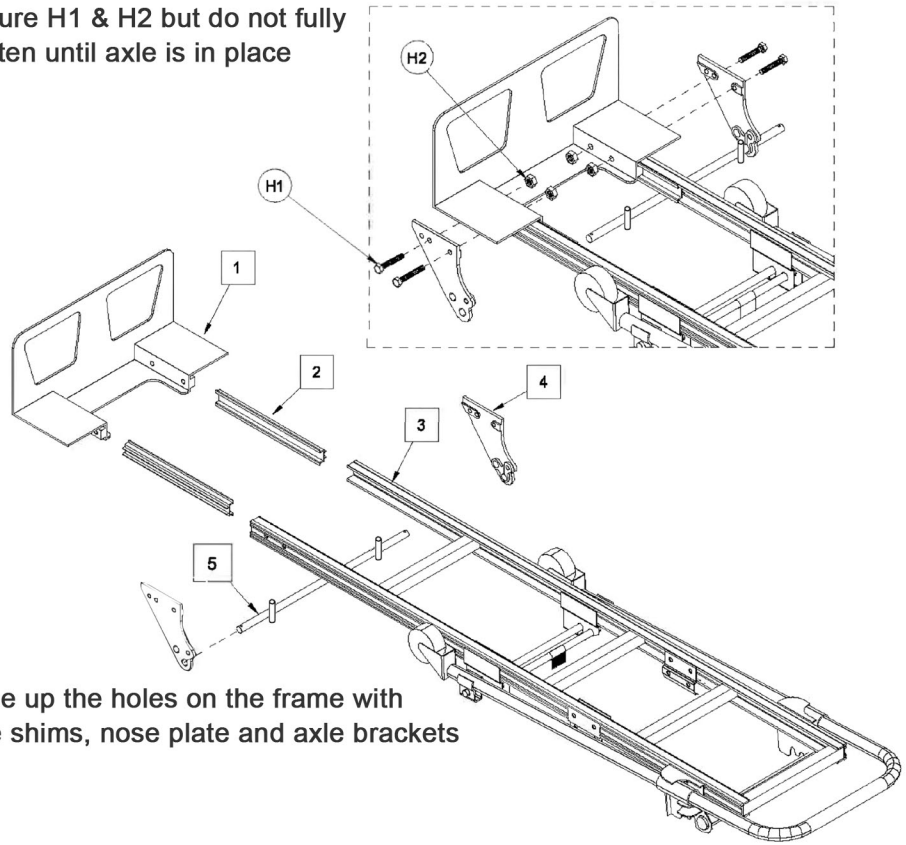

2 Secure H1 & H2 but do not fully tighten until axle is in place

3 Fully tighten H1 & H2 and then secure wheels

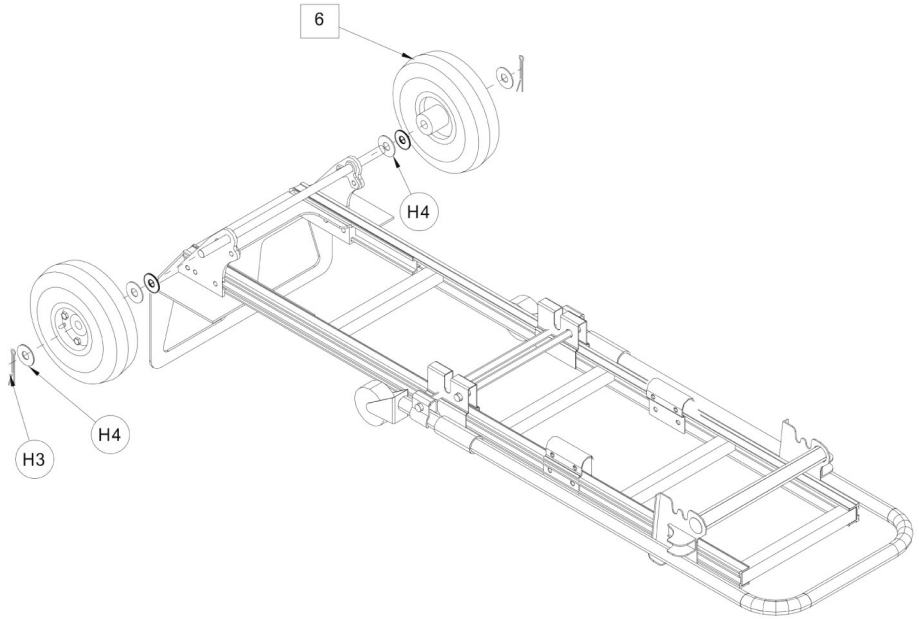

4 Insert handle and fully tighten all bolts
(frame bolts may be loose to allow insertion, please tighten)

